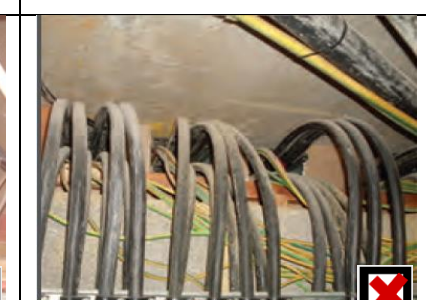


Examples of Good Practises:

		
<p>Correctly installed and labeled penetration seals</p>	<p>Correctly installed and labeled penetration seals</p>	<p>Correctly installed and labeled penetration seals</p>
		
<p>Correctly installed and labeled penetration seals</p>	<p>Correctly installed and labeled penetration seals</p>	<p>A correctly installed pipe penetration</p>

Examples of Bad Practises:

		
<p>Incorrect use of a proprietary foam as a penetration seal</p>	<p>Incorrect use of a proprietary foam as a penetration seal</p>	<p>Incorrect use of a proprietary foam as a penetration seal</p>
		
<p>Incorrect use of a proprietary foam as a penetration seal</p>	<p>Penetrations not protected</p>	<p>Penetrations not protected</p>
		
<p>A poorly installed penetration seal to a damper</p>	<p>Incorrect location of a fire damper</p>	<p>No penetration seals provided for power cables in a compartment floor</p>